

IT - SCHEMA ISTALLAZIONE SUPPORTO *tnv*
EN -OVEN STAND INSTALLATION DIAGRAM *tnv*



IT – I SUPPORTI DEI TUNNEL (per uno o due tunnel sovrapposti) VENGONO FORNITI CON I SEGUENTI COMPONENTI:

- **NR. 4 GAMBE** (i codici sono riportati a pagina 7,8)
- **NR. 4 TRAVERSE LATERALI** (due superiori e due inferiori. I codici sono riportati a pagina 7,8)
- **NR. 4 TRAVERSE FRONTALI** (due superiori e due inferiori. I codici sono riportati a pagina 7,8)
- **NR. 4 PIASTRE TRIANGOLARI** codice S42SF20001
- **NR. 4 ANGOLARI** codice S30SF55003
- **NR. 1 SACCHETTO** con tutta la viteria necessaria al fissaggio dei componenti

IT – I SUPPORTI DEI TUNNEL (per tre tunnel sovrapposti) VENGONO FORNITI CON I SEGUENTI COMPONENTI:

- **NR. 2 TRAVERSE LATERALI** (due superiori e due inferiori. I codici sono riportati a pagina 7,8)
- **NR. 2 TRAVERSE FRONTALI** (due superiori e due inferiori. I codici sono riportati a pagina 7,8)
- **NR. 4 PIASTRE TRIANGOLARI** codice S42SF20001
- **NR. 4 ANGOLARI** codice S30SF55003
- **NR. 1 SACCHETTO** con tutta la viteria necessaria al fissaggio dei componenti

EN – TUNNEL SUPPORTS (for one or two overlapping tunnels) ARE SUPPLIED WITH THE FOLLOWING COMPONENTS:


- **NR. 4 LEGS** (the codes are shown on page 7,8)
- **NR. 4 SIDE CROSS-MEMBERS** (two upper and two lower. The codes are shown on page 7,8)
- **NR. 4 FRONT CROSS-MEMBERS** (two upper and two lower. Cdes are shown on page 7,8)
- **NR. 4 TRIANGULAR PLATES** code S42SF200001
- **NR. 4 CORNERS** code S30SF55003
- **NR. 1 BAG** with all the screws needed to fix the components

EN – TUNNEL SUPPORTS (for three overlapping tunnels) ARE SUPPLIED WITH THE FOLLOWING COMPONENTS:

- **NR. 2 SIDE CROSS-MEMBERS** (two upper and two lower. The codes are shown on page 7,8)
- **NR. 2 FRONT CROSS-MEMBERS** (two upper and two lower. Codes are shown on page 7,8)
- **NR. 4 TRIANGULAR PLATES** code S42SF200001
- **NR. 4 CORNERS** code S30SF55003
- **NR. 1 BAG** with all the screws needed to fix the components


IT - COLLEGARE LE 4 GAMBE (se presenti) CON LE 4 TRAVERSE INFERIORI UTILIZZANDO I 4 ANGOLARI (S30SF55003), LE 4 PIASTRE TRIANGOLARI (S42SF20001) E LE VITI IN DOTAZIONE CON IL SUPPORTO

EN - CONNECT THE 4 LEGS (if present) WITH THE 4 LOWER CROSS MEMBERS USING THE 4 CORNERS (S30SF55003), THE 4 TRIANGULAR PLATES (S42SF20001) AND THE SCREWS SUPPLIED WITH THE SUPPORT

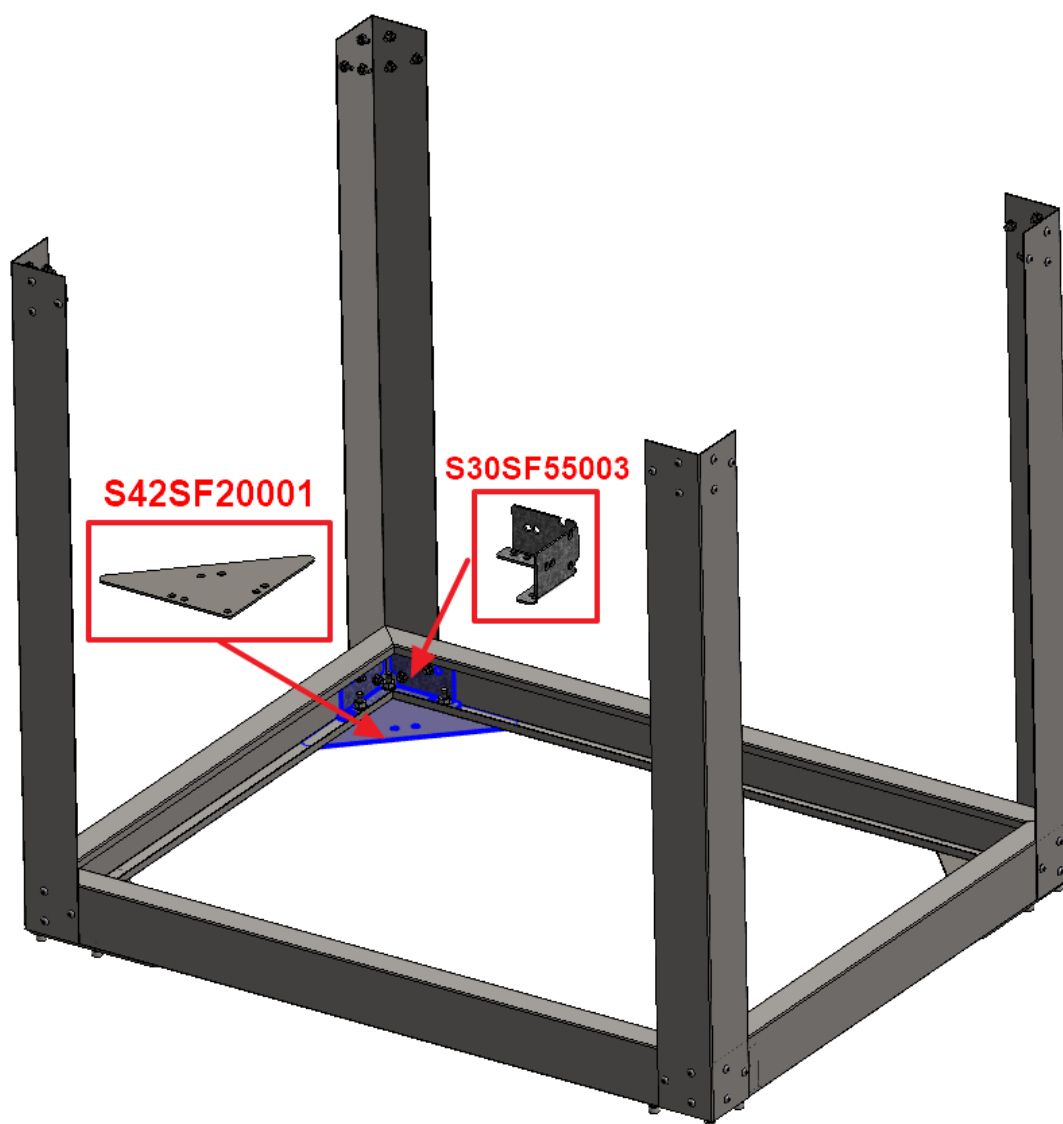


**IT – MONTARE LE 4 ROTELLE (A90RX89003 con freno -
A90RX89004 senza freno) FISSANDO LE CON LE VITI DATE
IN DOTAZIONE**

*EN - MOUNT THE 4 CASTERS (A90RX89003 with brake -
A90RX89004 without brake) FIXING THEM WITH THE
SCREWS PROVIDED*

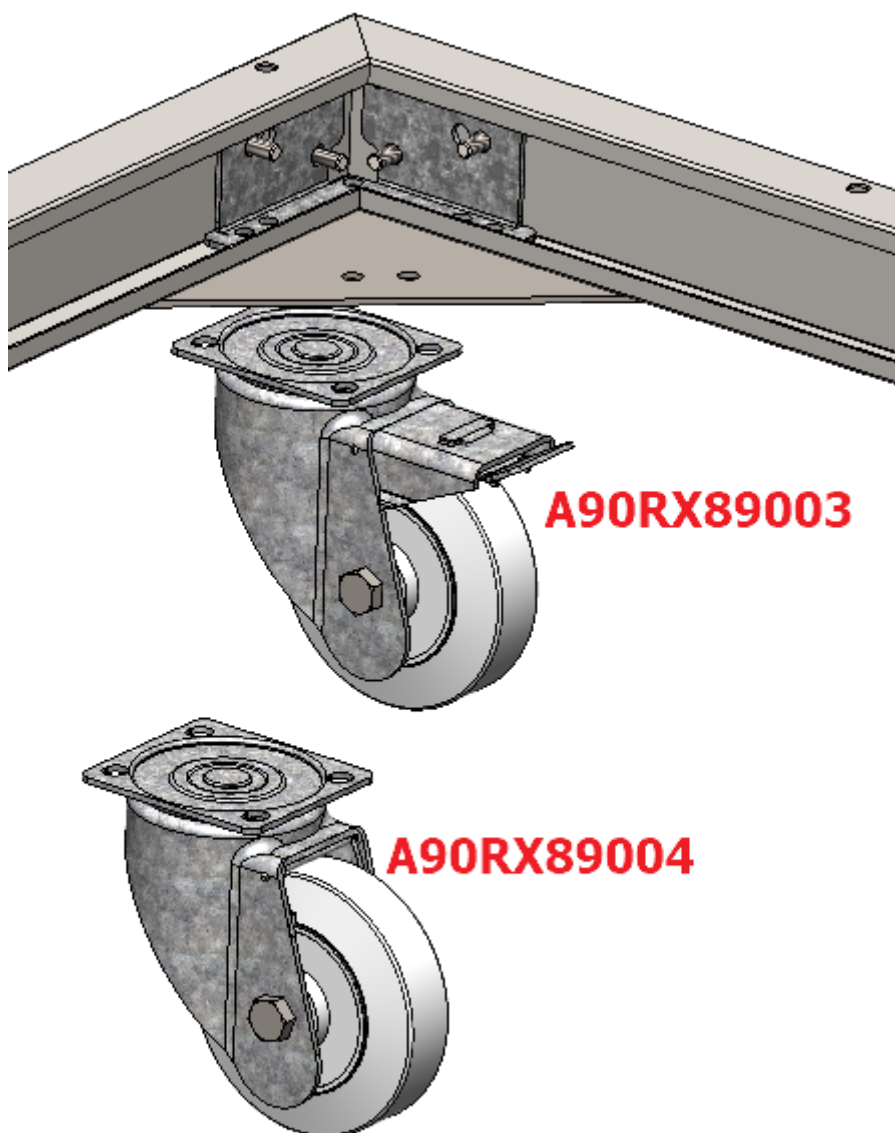


**IT – SE PRESENTI, MONTARE LE 4 TRAVERSE SUPERIORI
FISSANDO LE 4 GAMBE CON LE APPOSITE VITI DATE
IN DOTAZIONE**


*EN - IF PRESENT, FIT THE 4 UPPER CROSS-MEMBERS BY
FIXING THEM TO THE 4 LEGS WITH THE APPROPRIATE
SCREWS PROVIDED*

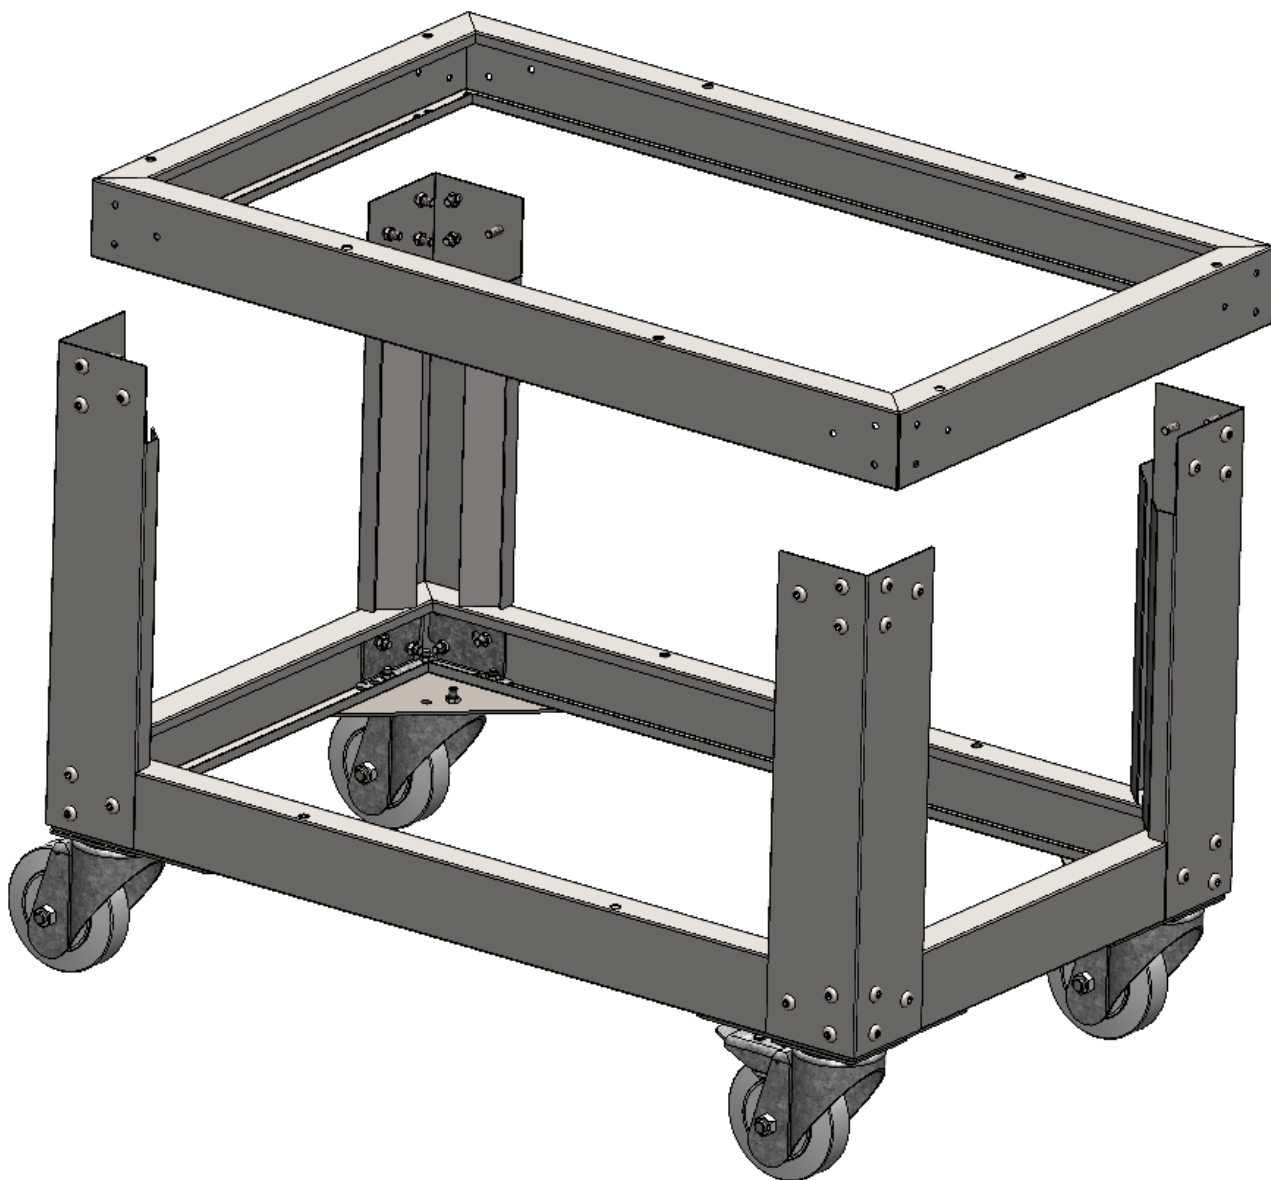


IT - CODICI RICAMBI DEL SUPPORTO

EN - SPARE PARTS CODES OF THE SUPPORT

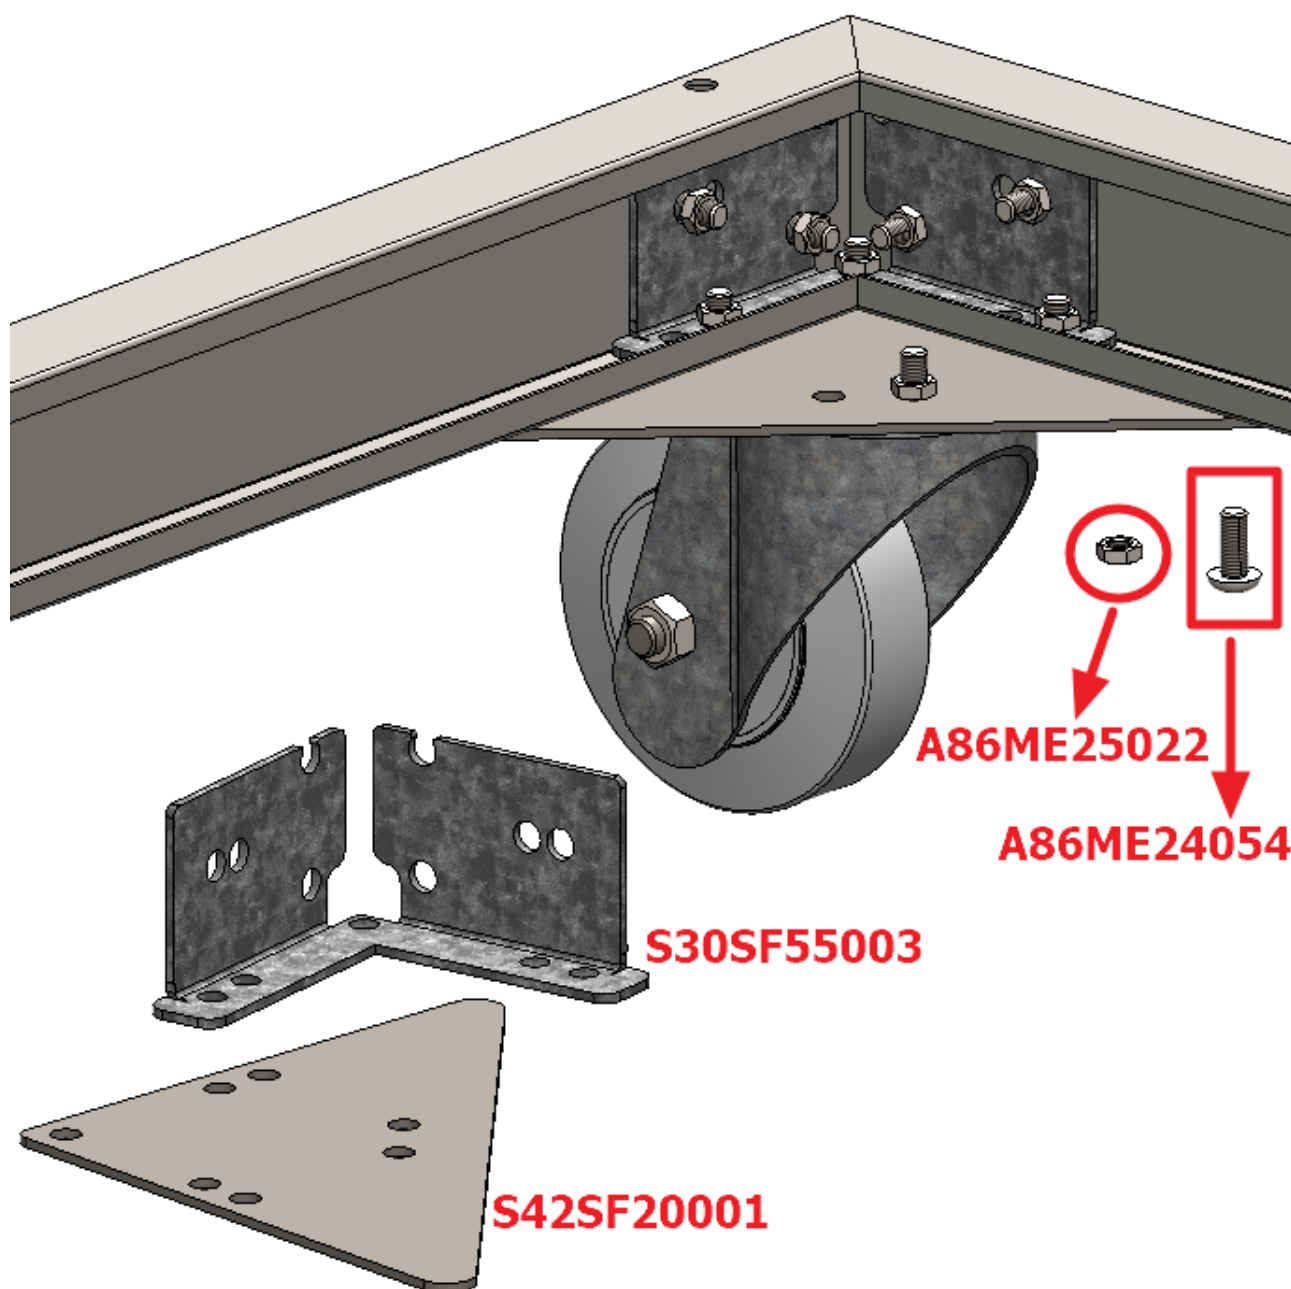

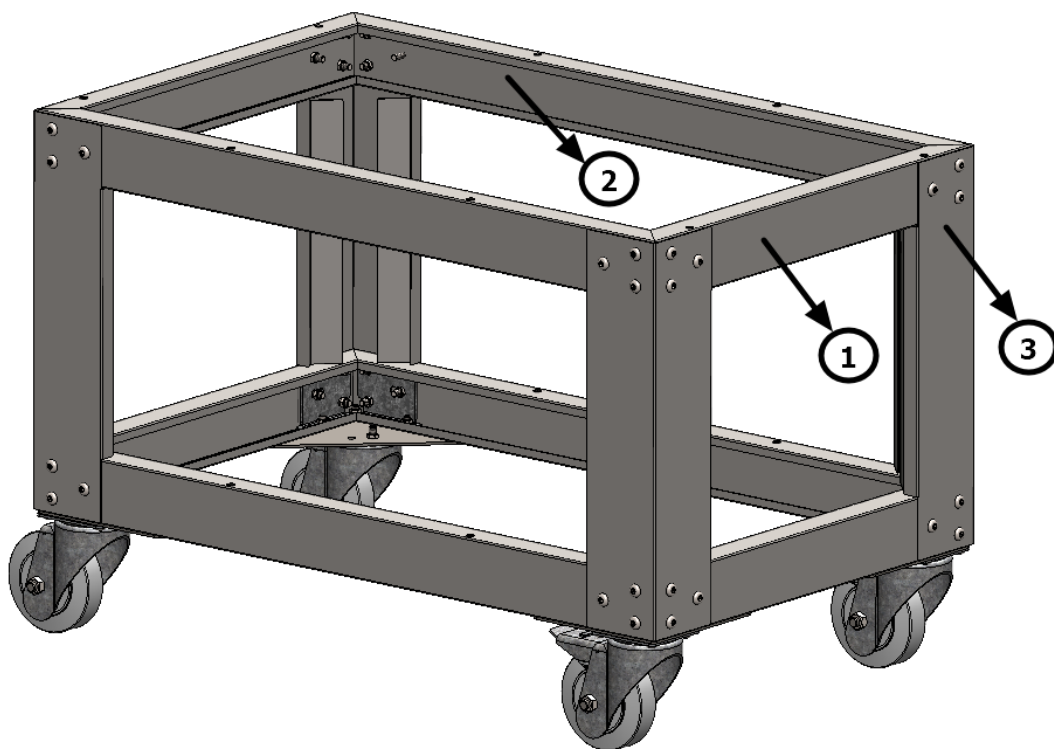

CODE	MOD	POSITION		
		1	2	3
P11SP66005	ST40	S59SP66007	S59SP66017	S57SP66003
P11SP66006	ST50	S59SP66003	S59SP66019	S57SP66001
P11SP66007	ST65	S59SP66011	S59SP66021	S57SP66001
P11SP66004	ST80	S59SP66015	S59SP66013	S57SP66001

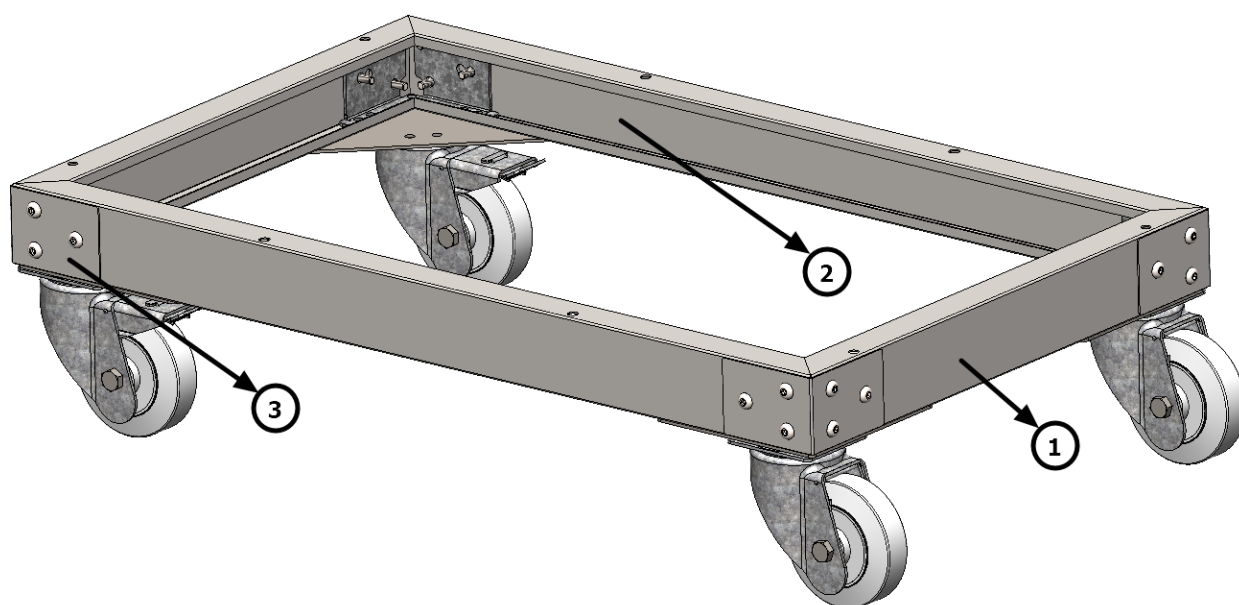

CODE	MOD	POSITION		
		1	2	3
P11SP66008	ST40 - 2	S59SP66007	S59SP66017	S57SP66005
P11SP66009	ST50 - 2	S59SP66003	S59SP66019	S57SP66005
P11SP66010	ST65 - 2	S59SP66011	S59SP66021	S57SP66005
P11SP66011	ST80 - 2	S59SP66015	S59SP66013	S57SP66005